

Mac OS X

OPPO Blu-ray Firmware CD

 
Burning Instructions

This guide will help OS X users in creating firmware CDs for their OPPO Blu-ray players. The version of OS X you may have can be different from the Mac used in this tutorial. However, the instructions and pictures should be very close to other versions of OS X.




Our MacBook is running the above version of OS X; 10.7.1


You will need a blank CD-R and a Mac that has a CD Burner drive. For burning purposes, we will utilize OS X's Disk Utility software. It is included in every Mac that runs on OS X, and can be usually found in your Utilities folder.

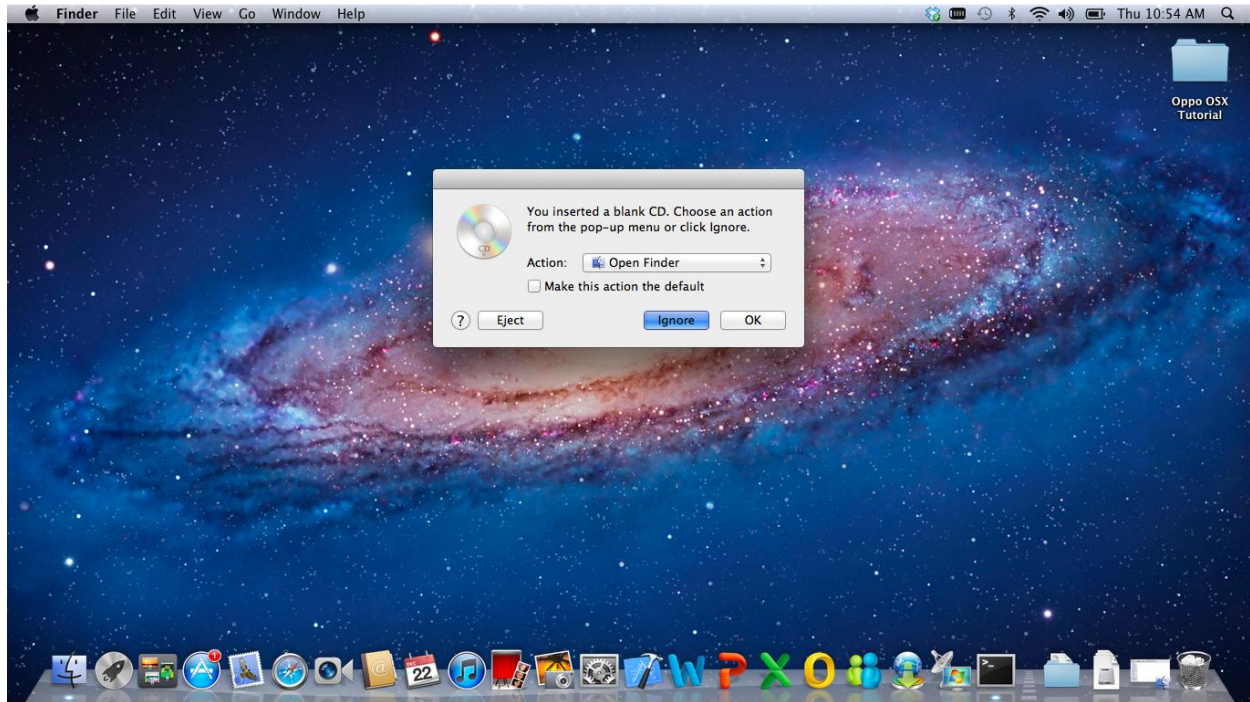

 - 1) Please insert a blank CD-R into your Mac. If prompted like above, please click on "Ignore".
- 2) Please return to the support webpage for the firmware you would like to update to. (This is the page where you found the link to this guide.) Then scroll down to the section called "Firmware Upgrade via CD".

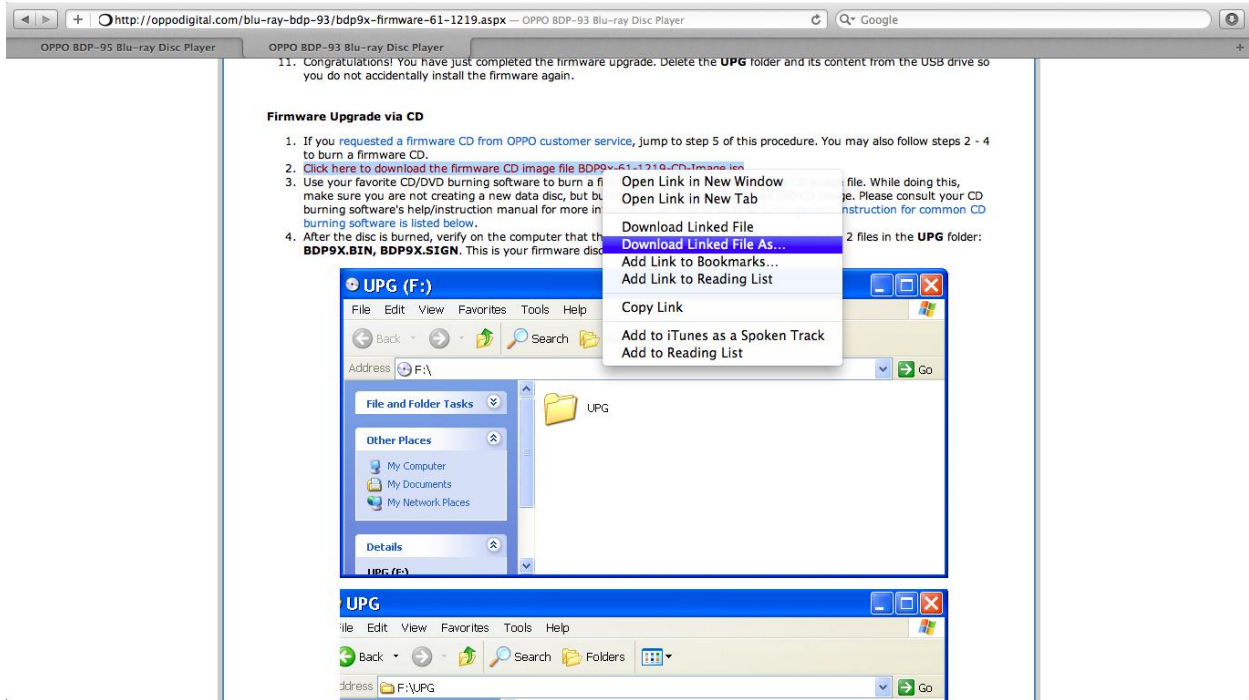

 
- 3) Go to step 2. Hold CONTROL & click the blue link. Choose "Download Linked File As..." (May be called "Save Link As".)

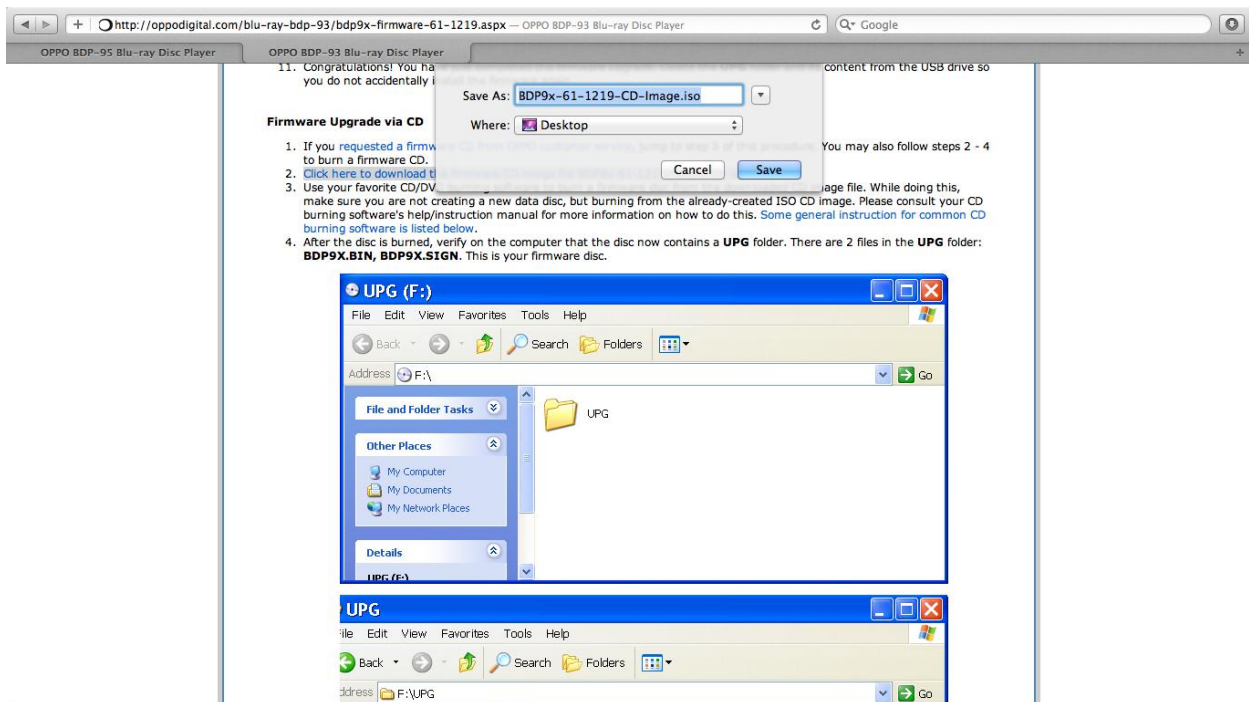


- 4) Be sure to change "Where:" to "Desktop" and click "Save".



 
5) Quit your browser once the download is complete. On the desktop you should see the .iso file that was downloaded. (In this instance it's BDP9x-61-1219-CD-Image.iso)

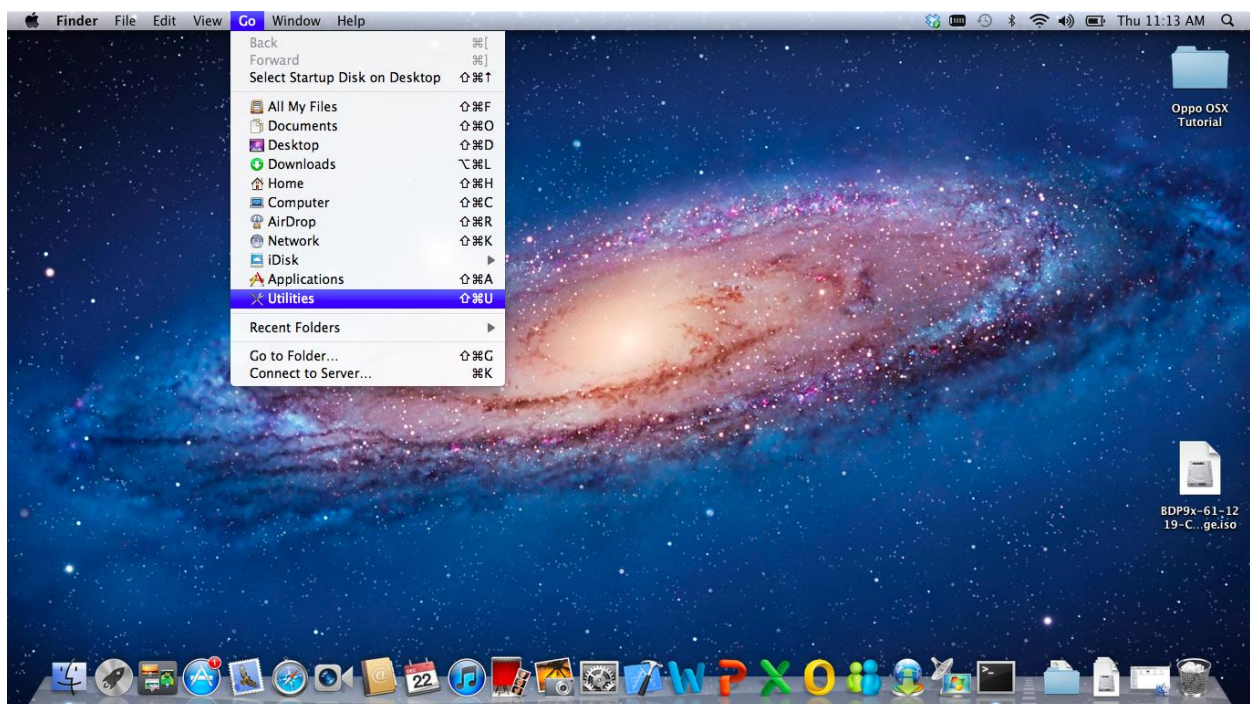

 
6) Click "Go", and choose "Utilities"

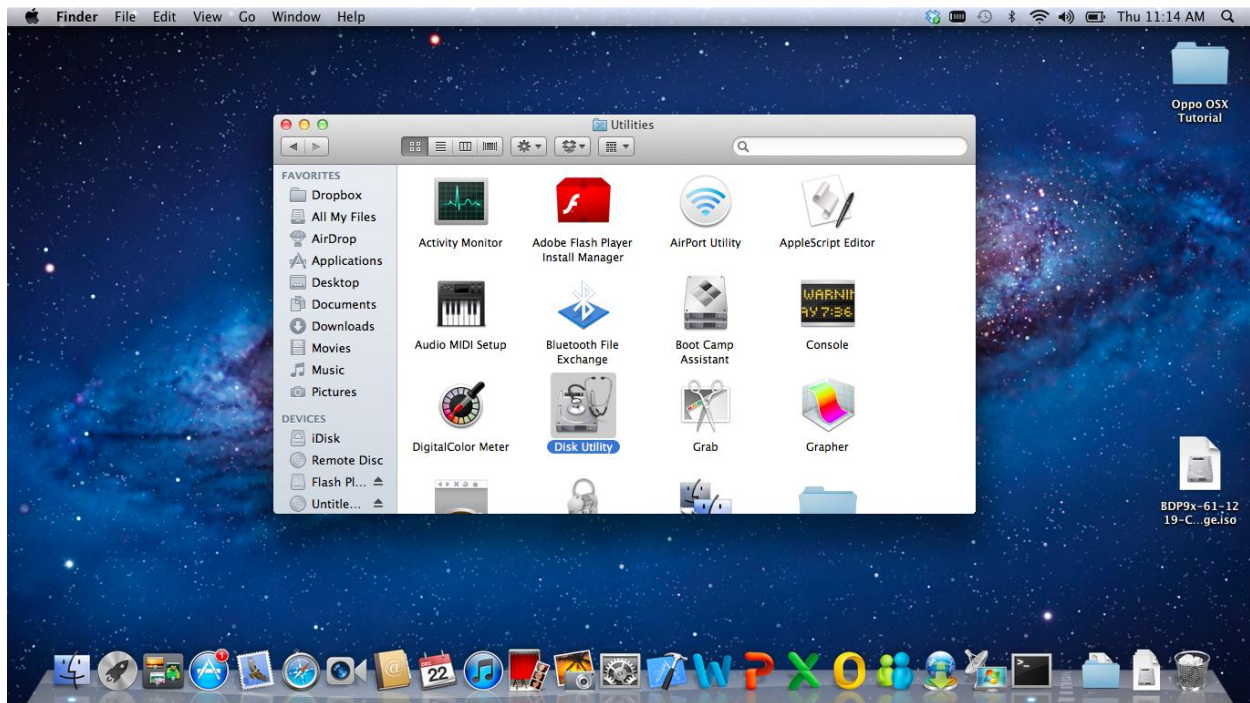

 
7) Open “Disk Utility”

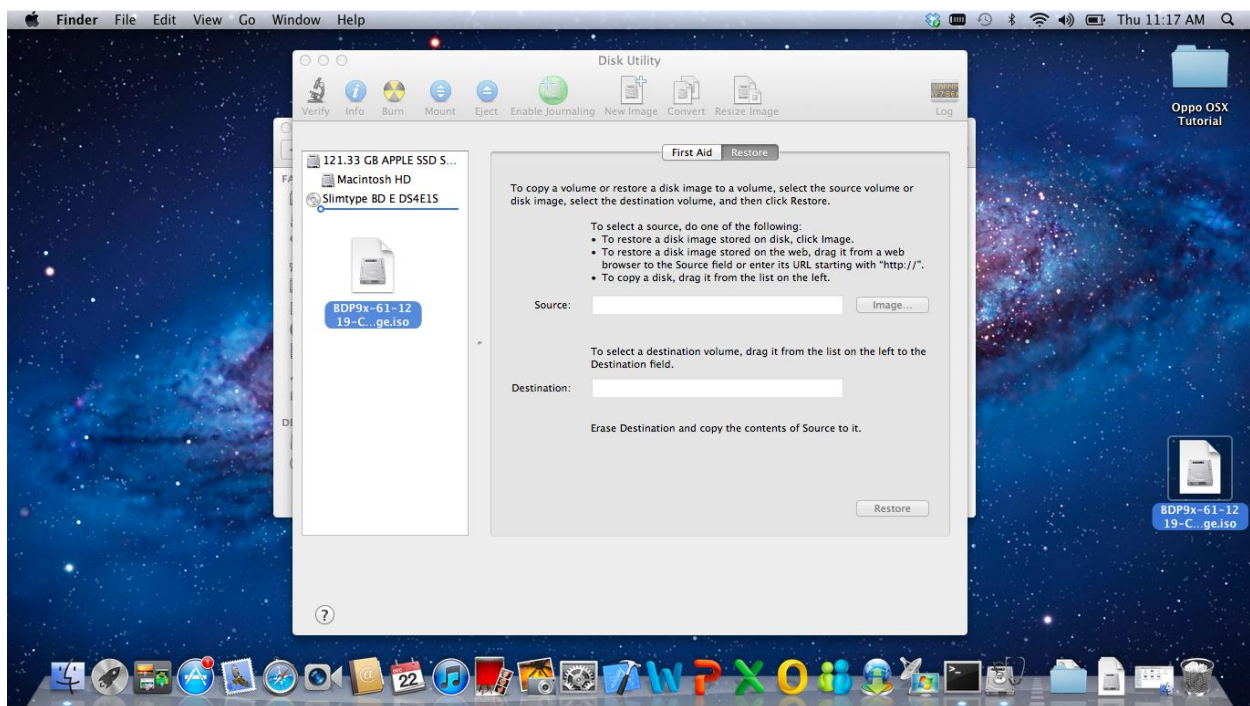

 
8) Once within Disk Utility, Drag the downloaded .iso file from the desktop to the left margin (in white) of Disk Utility.

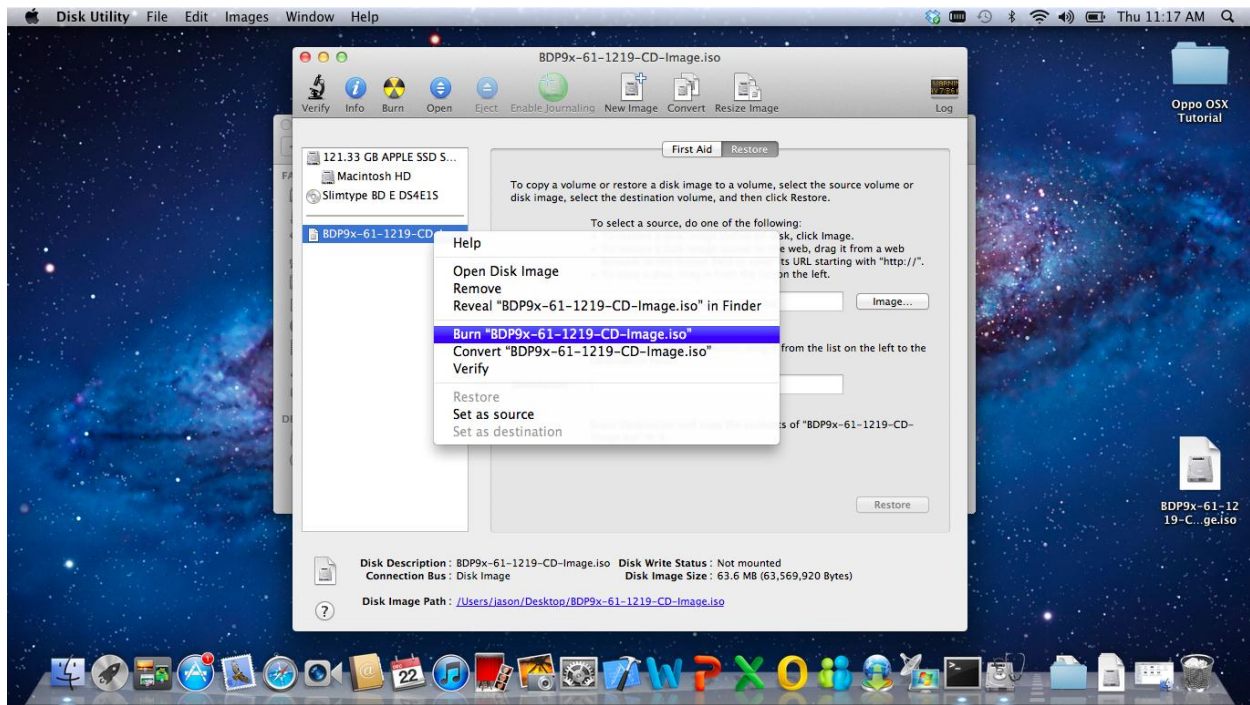

 
9) Hold CONTROL & click on the .iso within Disk Utility. Click "Burn xyz.iso".

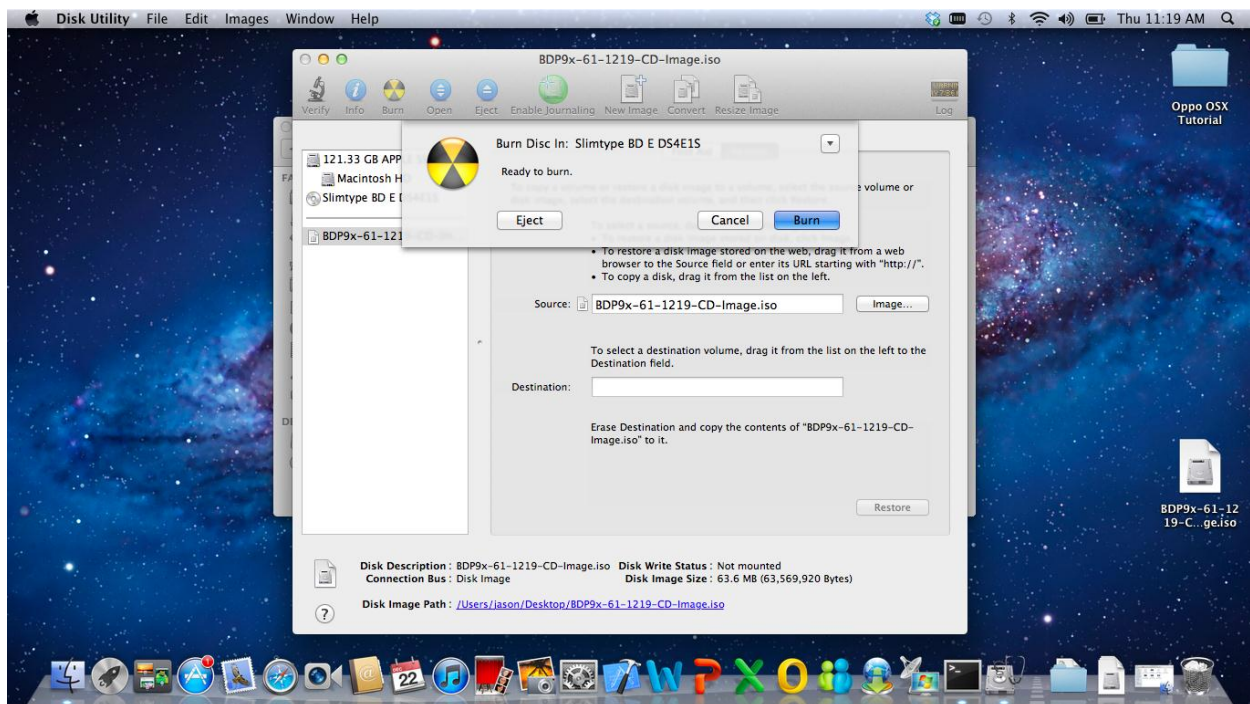

 10) Click "Burn"

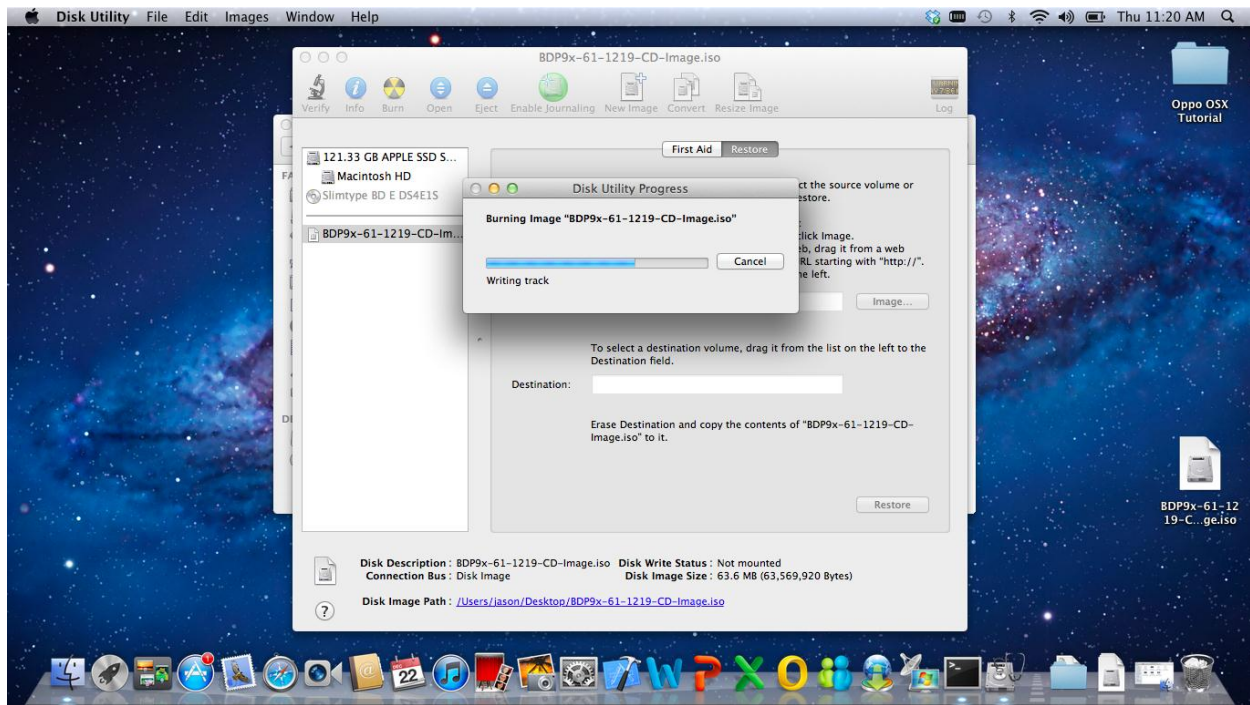

 11) At this point, Disk Utility will begin to burn the firmware CD. (It may verify the burn after.)

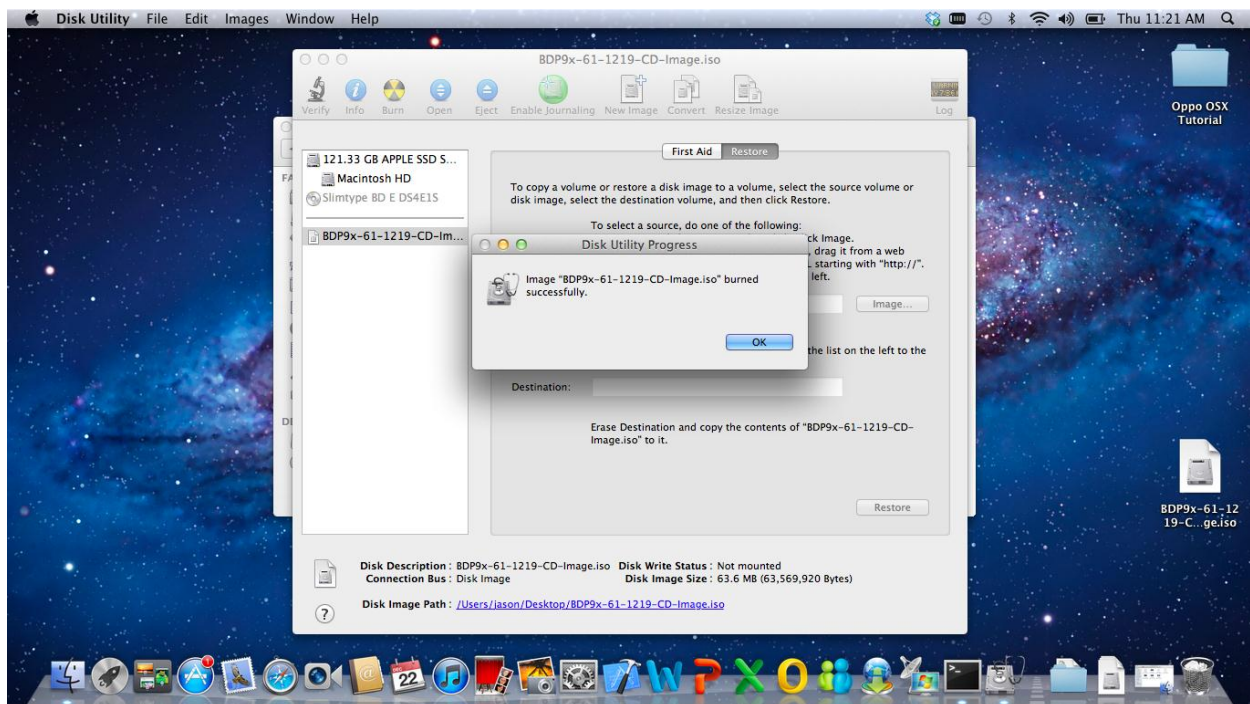

12) Once you see the above prompt, the burning process is complete. Click "OK", and exit Disk Utility. You may remove or delete the .iso file that was downloaded. (You may need to drag the now created firmware CD into the Trash to eject the CD.)

- 13) Turn on your TV display and the OPPO player. Make sure that the player is not playing any content.
- 14) Eject the disc tray, put in the firmware disc, and then close the tray. The player usually can recognize the firmware disc and prompt you for firmware upgrade. (In case the player does not prompt you, press the **SETUP** button on the remote control to enter the setup menu. Select **Device Setup, Firmware Upgrade**, and then **Via Disc**.)
- 15) Please follow the on-screen instructions to complete the firmware upgrade process. Use the remote control to respond to on-screen prompts. Do not use the front panel buttons because the front panel buttons will stop working during the upgrade process.
- 16) DO NOT ATTEMPT TO OPEN THE DISC TRAY, TURN OFF THE PLAYER, UNPLUG THE POWER, OR PRESS ANY BUTTONS OTHER THAN NECESSARY TO RESPOND TO THE ON-SCREEN PROMPT DURING THE REMAINING UPGRADE PROCESS.
- 17) Remove the disc from the tray when the tray ejects out. In order to complete the firmware upgrade process, the player will turn off automatically. In case the player retracts the tray and turns off before you remove the firmware disc, press the OPEN/CLOSE button on the front panel. The player will turn on and the tray will eject. Remove the disc at this time.
- 18) Turn on the player again after the firmware upgrade process is completed. Check the new firmware version by going to the setup menu, and then selecting **Device Setup - Firmware Information**.
- 19) Congratulations! You have just completed the firmware upgrade. Erase or discard the firmware disc so you do not accidentally install the firmware again.