

custom code	0x629D
POWER	0x0A
MUTE	0x03
VOL-	0x07
VOL+	0x19
PREV	0x47
PLAY/PAUSE	0x11
NEXT	0x2A
USB	0x15
OPTI	0x5C
COAX	0x2C
AUX	0x09
DIMMER	0x05
INFO	0x52
anti-clockwise	0x56
clockwise	0x58
enter	0x5A